


Variomount Mounting Instructions

Phase 1



1. The Variomount aluminium profile system builds upwards from the bottom profile to mount horizontal LED Light Sheet panels.

Mount the bottom profile onto the wall at the desired location. The first LED Light Sheet panel is then inserted into the 13mm wide recess of the profile.

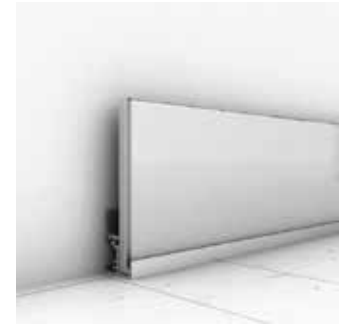

Phase 2



2. Place the intermediate profile on top of the first LED Light Sheet panel and use the pre-drilled holes to secure the profile to the wall.

Insert the grub screws, which are used to adjust shelves fitted into the system, with the hexagonal footprint facing down.



Phase 3



3. Next install the top profile. First fit the wall support Z-Vario (or length of z-section) onto the wall and then place the top profile on top, slotting it over the LED Light Sheet panel.



Phase 4



4. After positioning the supporting structure, the shelves are inserted. The inclination of the shelf can be adjusted by tightening the grub screws (see step 2) with an Allen key.

The end lock is secured by the lateral insertion of the shelf anchor strip. This is fitted on top of the shelf into a shaped hollow channel in the intermediate profile.



Phase 5



5. Using self tapping screws, side brackets with Velcro are secured to ends of intermediate profiles and top/bottom brackets are secured to the top/bottom profiles.



Phase 6



6. Finally, side profiles are fitted to the composition using the side brackets with Velcro.

